


How to Insert a Spout Into Carboy

1. To use the spout, unscrew and remove the large cap. The plastic around the inside of the cap is thinner than the rest of the cap. Use a utility knife to remove this thin portion of the cap, cutting a circle for the spout to fit into.

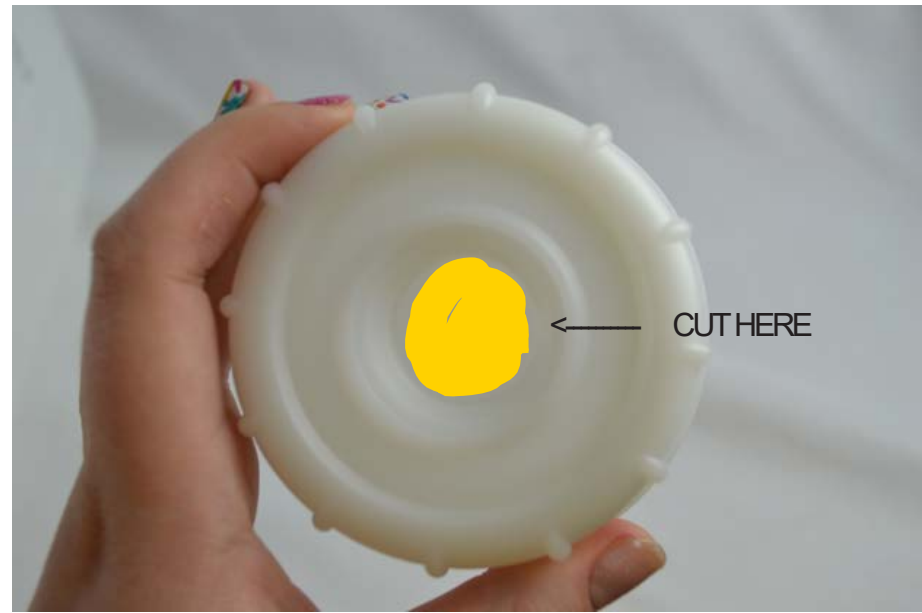

2. Screw the spout into the large cap where the hole was cut and screw the cap back onto the carboy.

More questions?
Phone:(585)226-6177
Fax: (585)226-6919

Aldon Corporation

